

WILLIAM MARVY COMPANY, INC.

1540 ST. CLAIR AVENUE • ST. PAUL, MINNESOTA 55105
651-698-0726 • 800-874-2651 • FAX 651-698-4048
wmmarvyco.com

INSTRUCTIONS TO WIRE YOUR MARVY BARBER POLE

Your barber pole has four wires: white, red, black and green. The white wire is the neutral, the red wire is for the motor, the black wire is for the light(s), and the green wire is the ground. The red and black wires may be connected together and switched for normal operation. Switching the red and black wires independently will allow operating the motor without the light(s) or the light(s) without the motor.

The wiring access hole(s) is threaded to accept standard ½" conduit fittings.

GUIDELINES FOR LIGHTBULBS

For best results use a 4 watt LED (soft-white) for barber poles with a 3¼" or 3½" diameter inner cylinder. Use a 10 watt LED (soft-white) for barber poles with 5¼" or 6¾" diameter inner cylinder.

Use of higher wattage light bulbs may damage the inner cylinder and void the warranty.

